



BAUER

FOR A GREEN WORLD

Ecostar 6000

Update Guide



BAUER

FOR A GREEN WORLD

c Bauer GmbH

V3.0

Contents

Attention	1
Software Update	2
Possibility 1.....	2
Step1: Preparing the USB stick.....	2
Step2: Disconnect the power supply.....	3
Step3: Plug in the USB stick.....	3
Step 4: Plug in the power supply.....	4
Step 5: Remove USB stick / power reset.....	4
Step6: Check the software version.....	4
Attention	5
Possibility 2.....	5
Step1: Preparing the USB stick.....	5
Step2: Plug in the USB stick.....	6
Step3: Backup Menu	6
Step 5: Remove USB stick / power reset.....	7
Step6: Check the software version.....	8
Installing new languages	Fehler! Textmarke nicht definiert.
Step1: Preparing the USB stick.....	Fehler! Textmarke nicht definiert.
Step2: Delete the old language files.....	Fehler! Textmarke nicht definiert.
Step3: Plug in the USB stick.....	Fehler! Textmarke nicht definiert.
Step4: Import the new language files	Fehler! Textmarke nicht definiert.
Step5: Select the language	Fehler! Textmarke nicht definiert.
List of figures	8

Attention



It is important to update the software version or to import, to delete or to change a language only while the irrigation is not active.

Software Update


Bauer GmbH provides several updates for the Ecostar6000 to improve the functions of the system. The latest software versions are available on the Bauer – homepage.

There are two possibilities to update the Ecostar. The following steps describes how to make a successful update.

Possibility 1

Step1: Preparing the USB stick

Download the actual version from the homepage e.g. “Ecostar 6000 VXX.XX.zip”. Unpack this file and copy the four files on an empty USB stick:

-  Bios.inf
-  Ecostar.bin
-  EEPROM.BAK
-  SPIFLASH.BAK

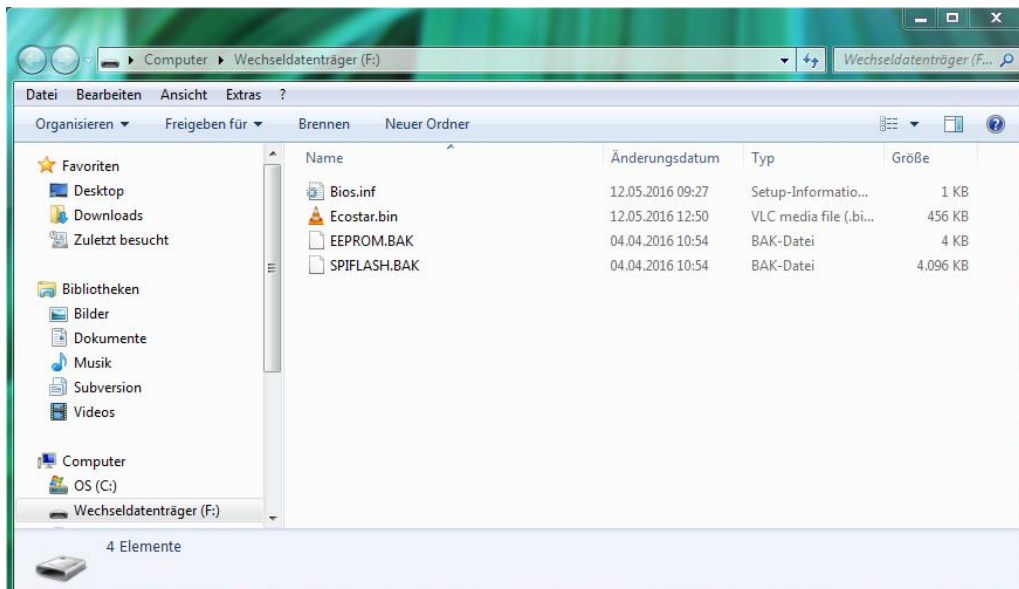


Figure 1 - Update Files

Step2: Disconnect the power supply

Remove the plug of the at the battery or unplug the connector at the backside of the Ecostar6000

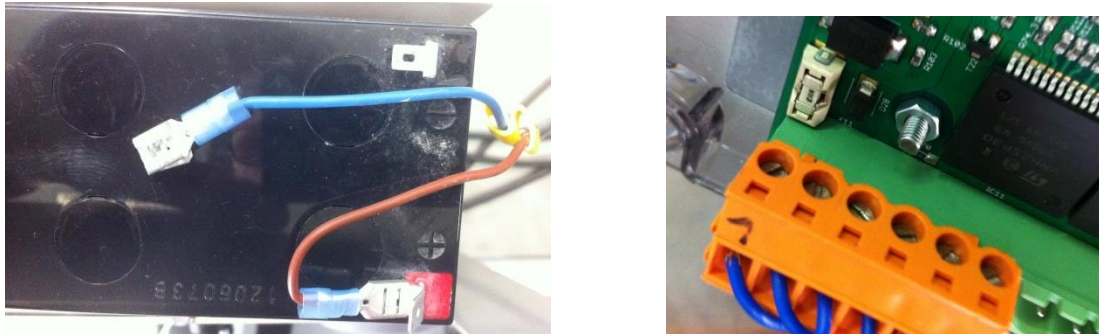


Figure 2 - Power supply

Step3: Plug in the USB stick

Plug in the USB stick at the USB port at the backside of the Ecostar6000.



Figure 3 - USB stick

Step 4: Plug in the power supply

After connecting the power supply the Ecostar6000 checks if there is an USB stick connected. If the USB stick is recognized, a special update melody comes up and the controller starts to update the software. During the update the display is black but at the back there should be flashing three led's.



Figure 4 - LED's flashing

The update is ready when the homescreen is shown on the display.

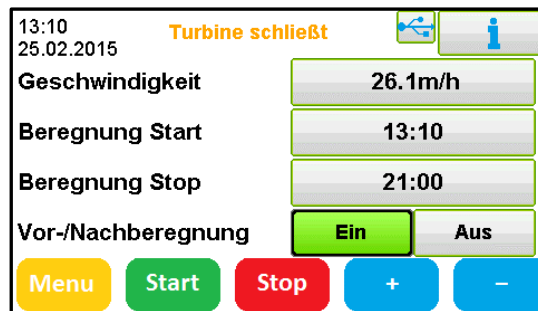


Figure 5 - homescreen

Step 5: Remove USB stick / power reset

Remove the USB stick and plug off and on the power supply to make a reset.

Step 6: Check the software version

Check if the correct version is installed. This information is available at "Menu" -> "Service / Info" -> "Info".

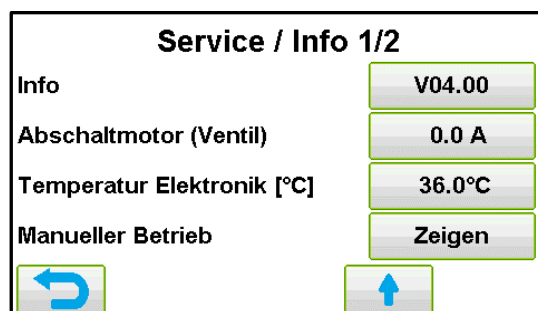


Figure 6 - installed SW version¹

¹The shown software version could be higher.

Attention







There is a second possibility to update the Ecostar if the update was not successful.

Possibility 2

Step1: Preparing the USB stick

Download the actual version from the homepage e.g. "Ecostar 6000 VXX.XX.zip". Unpack this file and copy the four files on an empty USB stick:

-  Bios.inf
-  Ecostar.bin
-  EEPROM.BAK
-  SPIFLASH.BAK

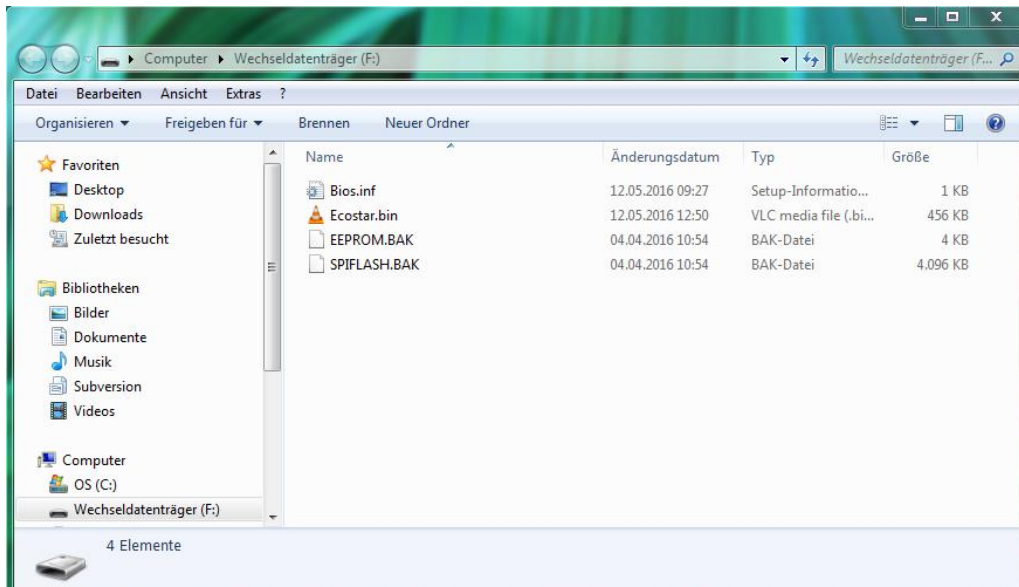


Figure 7 - Update Files

Step2: Plug in the USB stick

Plug in the USB stick at the USB port at the backside of the Ecostar6000.



Figure 8 - USB stick

If the USB stick was recognized the USB symbol is shown at the right corner.

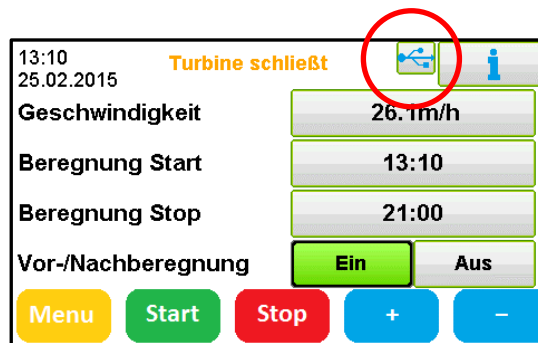


Figure 9 - USB symbol

Step3: Backup Menu

Press "Menu" and open the "Backup".



Enter the Backup Menu with "8570" and open the

second page by pressing "down arrow".



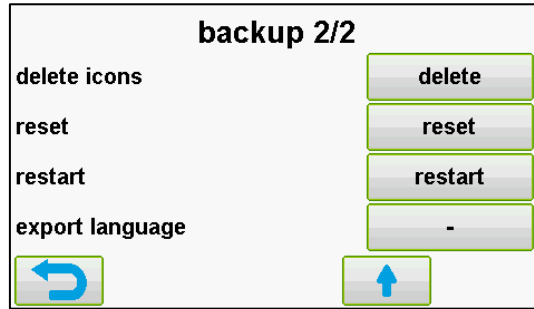


Figure 10 – Backup page 2

Press „restart“, a special update melody comes up and the controller starts to update the software. During the update the display is black but at the back there should flashing three led’s.



Figure 11 - LED's flashing

The update is ready when the homescreen is shown on the display.

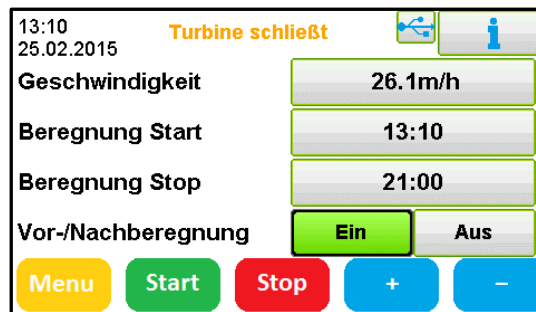


Figure 12 - homescreen

Step 5: Remove USB stick / power reset

Remove the USB stick and plug off and on the power supply to make a reset.

Step6: Check the software version

Check if the correct version is installed. This information is available at “Menu” -> “Service / Info” -> “Info”.

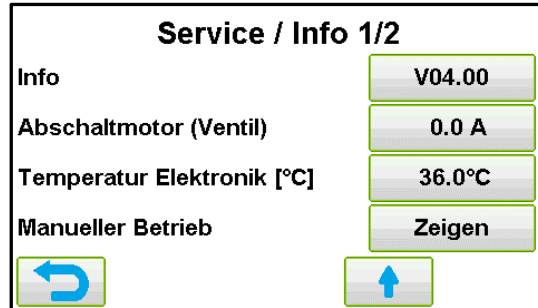


Figure 13 - installed SW version²

List of figures

Figure 1 - Update Files.....	2
Figure 2 - Power supply	3
Figure 3 - USB stick.....	3
Figure 4 - LED's flushing	4
Figure 5 - homescreen	4
Figure 6 - installed SW version	4
Figure 7 - Update Files.....	5
Figure 8 - USB stick.....	6
Figure 9 - USB symbol.....	6
Figure 10 – Backup page 2	7
Figure 11 - LED's flushing	7
Figure 12 - homescreen	7
Figure 13 - installed SW version	8
Figure 14- language files.....	Fehler! Textmarke nicht definiert.
Figure 15: Sytem setting.....	Fehler! Textmarke nicht definiert.
Figure 16 - change language.....	Fehler! Textmarke nicht definiert.
Figure 17 - delete language.....	Fehler! Textmarke nicht definiert.
Figure 18 - USB stick.....	Fehler! Textmarke nicht definiert.
Figure 19 - Base setting.....	Fehler! Textmarke nicht definiert.
Figure 20 - import language.....	Fehler! Textmarke nicht definiert.
Figure 21 - list of files	Fehler! Textmarke nicht definiert.
Figure 22 - select language	Fehler! Textmarke nicht definiert.

² The shown software version could be higher.