



## SmartRain set up guide for Ecostar 6000

To activate SmartRain on your Ecostar 6000 you have to follow the instructions below:

Step 1. Enter the modem menu

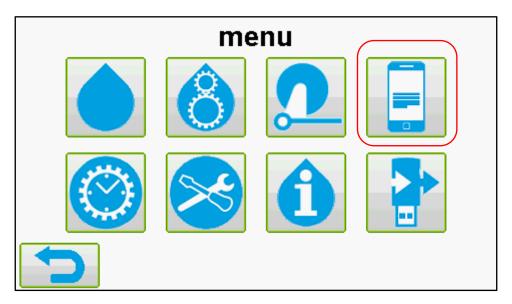

Step 2. Set "Connection" to "Data" and "GPS" to "on".

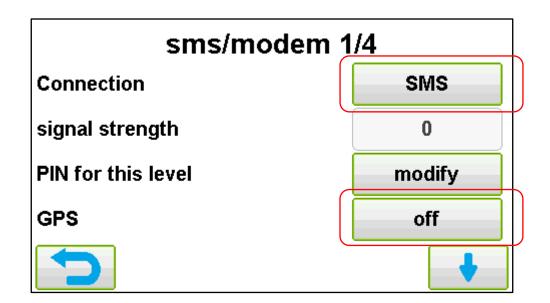




Step 3. Make sure that the server IP and the server port are the same as in the picture below.

The Address is very important and unique and provided by Bauer for every single Ecostar.

Customers will receive the Address from BauerGmbH.

Usually the Address is a combination of the serial number of the Ecostar 6000 and an ongoing number.

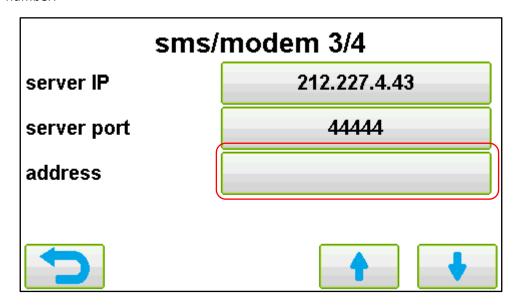

Step 4. If you get a Sim-Card from BauerGmbH, you do not have to change the settings on this page and leave it as it is in the factory settings.

If you do not have a Bauer Sim-Card, these settings are dependent on the provider. Try to find out this information from your provider and fill it in here afterwards.

